

glazeaway

uv nail polish removal machine

Getting started....

- Please read the removal instructions carefully.
- The GlazeAway polish remover can be used with pure acetone or GlazeMe Gentle Tone.

How to remove your UV nail polish with GlazeAway

- Place the machine on a flat, hard, even surface.
- Take the black dome cover off the top of the machine.
- Turn the black lid anti-clockwise and lift off to reveal the clear plastic bowl for the acetone.
- Pour approximately 8ml of acetone into the clear container (this will be sufficient for both hands at 10 minutes each) and replace lid.
 - **Do not pour acetone directly into the machine - It must be poured into the plastic container supplied.**
- Use a buffer to scuff the top coat on your nails. This will compromise the top layer, allowing the acetone to easily penetrate and break down the remaining layers.
- Turn the machine on using the on switch located on the back of the machine. The red light on the front will appear, indicating it is heating up but not yet ready to use.

- After approximately 30 seconds, the machine will beep once and the green light will come on - this indicates the start of the timing process. Insert your fingers into the holes and wrap your fingers around the lid in a gripping action, ensuring your thumb is not coming into contact with the inside of the machine.
- If the red light comes on intermittently throughout the process, this is an indication that it is maintaining the required temperature.
- It is normal for your fingers to feel warm throughout the process, however if it feels uncomfortable remove your fingers from the machine.

- At 5 minutes you will hear 2 beeps to indicate you are halfway through the removal process.
- At 10 minutes you will hear 1 beep and the amber light will come on to indicate the steaming process has finished.
- Remove your fingers from the machine and use an orange stick to quickly scrape off loose polish. (TIP: as the acetone can dry very quickly once fingers are removed from the machine, try removing one finger at a time to scrape off the remaining polish so the other fingers remain moist within the machine)
- If there are any stubborn areas of polish that are too hard to remove (the polish may have been applied thickly or extra layers were applied etc), turn the machine off at the switch and start again from step one but remove fingers when the machine beeps twice at the 5 minute interval and use the orange stick to remove the remaining polish.
- Turn the machine off at the switch once the removal process is complete and clean the clear container of any polish debris with warm soapy water, ready for the next use.



Light Colour

- Red - Machine is Heating Up.
- Green - Ready - Insert Fingers
- Amber - Finished - Remove Fingers

Product Support:

If you have any questions, please email us at enquiries@glazeme.com.au

Don't forget to check out our DIY videos at : www.glazeme.com.au/how-to-diy